

GENERAL INSTALLATION INSTRUCTIONS


Description: Universal Clear LED
 Replacement Tail Light




**Read complete instructions
 before installation!
 Improper installation may
 void warranty**

Tools Needed:

Phillips screwdriver, small flat screwdriver,
 3/8 drive ratchet, 3/8 extension, & 10mm socket

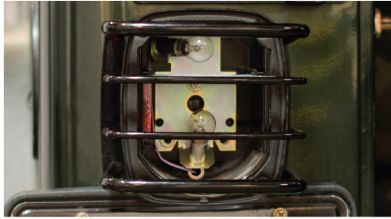


Step 1: Remove tail light lens by unscrewing four Phillips screws.

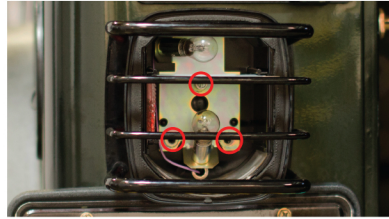

Step 2: Remove three 10mm bolts within tail light assembly.




Step 3: Disconnect the tail light harness.

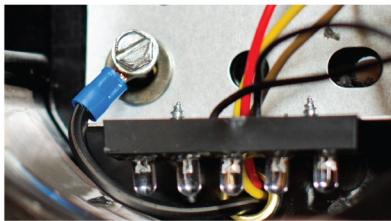

Step 4: On the Anzo tail light you will have to run a 17" in (12 – 16 gauge) grounding into the bottom of the wiring harness into the tail light assembly.

Ground out the wire to the tail light assembly.

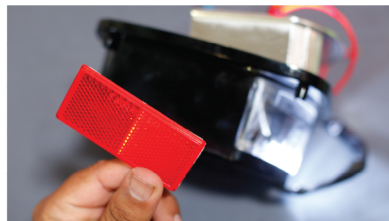


Step 5: Add side reflector to each outer side of tail light. Please note that each tail light comes with an L.E.D. bulb located underneath the tail light to illuminate the license plate.



Step 6: Tap into existing wiring harness:

**Red wire is reverse light.
 Brown wire is running light.
 Yellow wire is brake & turn signal.
 Black resistor wire goes to ground.
 Blue wire ties into yellow wire.**

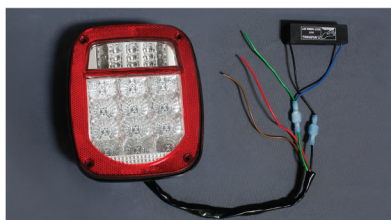


Step 7 (Left Tail Light): Tap into existing wiring harness:

**Red wire is reverse light.
 Brown wire is running light.
 Green wire is brake & turn signal.
 Resistor black wire goes to ground.
 Blue wire ties into green wire.**



Step 8: Punch out tabs for mounting holes, using a hammer and supplied 11mm bolt.

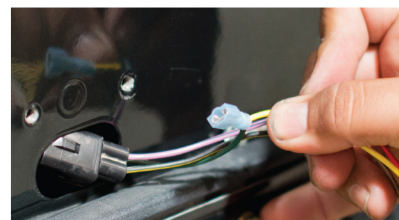

Step 9: Crimping completed. Feed harness into chassis.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard. Please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

GENERAL INSTALLATION INSTRUCTIONS


Description: Universal Clear LED
 Replacement Tail Light




**Read complete instructions
 before installation!
 Improper installation may
 void warranty**

Tools Needed:

Phillips screwdriver, small flat screwdriver,
 3/8 drive ratchet, 3/8 extension, & 10mm socket

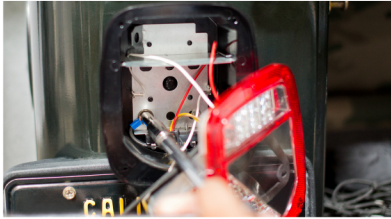


Step 10: Install the Anzo tail light
 Secure the three 10mm bolts to the
 Anzo tail light.

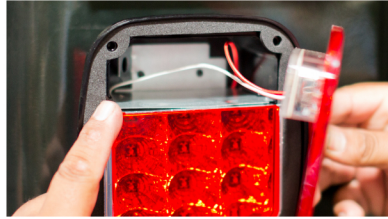

Step 11: Optional: You can install red
 lens cover over the clear tail light lens.



Step 12: Seat the red brake lens from
 the bottom at a 90 degree angle, so that
 the tail light lens secures the red brake lens
 in place. Use the four provided Phillips
 screws to hand tighten the tail light lens.

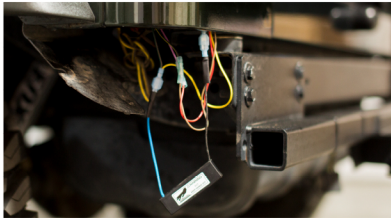

Step 13: Secure the resistor to the inside
 of the body of the Jeep.

Connect reused tail light harness.



Step 14: Anzo Tail Lights Installed.

**Check all functionality of the
 new light before operating on any
 public roads.**



Step 15: Test the tail lights by running
 through the cycles:

**Brake Lights
 Turn Signals
 Parking Lights**



Step 16: Test the tail lights by
 running through the cycles:

Reverse Lights



Tail Light without Red Brake Plate

Special Instructions: For 87-95 Jeep Wrangler you
 will need to upgrade your turn signal flasher to a
 LL552 flasher in order for the lights to work properly.
 This flasher is available at any local auto part store.



Your flasher is located under the
 steering column on the firewall.

For 97-2006 Jeep Wrangler use the supplied resistor.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard. Please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.