



DIFFICULTY LEVEL

EASY



HARD







READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION! IMPROPER INSTALLATION MAY VOID WARRANTY



ANZOUSA™ PRODUCTS ARE COVERED TO BE FREE OF MANUFACTURING DEFECTS BY A LIMITED TWO-YEAR WARRANTY. HOWEVER, CERTAIN ANZOUSA™ PRODUCT CATEGORIES HAVE WARRANTY POLICIES WHICH DIFFER FROM THIS STANDARD. PLEASE CONTACT YOUR REPRESENTATIVE FOR DETAILED CATEGORY INFORMATION. DAMAGE DUE TO IMPROPER INSTALLATION OR ROAD HAZARDS IS NOT COVERED. SELLER AND MANUFACTURER'S ONLY OBLIGATIONS SHALL BE TO REPLACE THE PRODUCT PROVEN TO BE DEFECTIVE. NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF OR THE INABILITY TO USE THE PRODUCT. BEFORE USE, USER SHALL DETERMINE THE SUITABILITY OF THE PRODUCT FOR ITS INTENDED USE, AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH.

© 2023 ANZOUSA™ ALL RIGHTS RESERVED



"DON'T GET LEFT IN THE DARK'

2021-2023 FORD F-150 HEADLIGHTS TOTAL STEPS: 7



STEP 1

LOCATE DRL HARNESS
PROVIDED WITH HEADLIGHTS
IN BOX.



STEP 2

CONNECT DRL HARNESS
CONNECTOR CIRCLED TO
DRIVER/LEFT SIDE HEADLIGHT
DRL CONNECTOR AS SHOWN.



STEP 3

CONNECT DRL HARNESS
CONNECTOR TO
PASSENGER/RIGHT SIDE
HEADLIGHT DRL CONNECTOR.



STEP 4

LOCATE VEHICLE BATTERY ON PASSENGER/RIGHT SIDE OF VEHICLE.



STEP 5

CONNECT FORK SPADE
CONNECTORS TO THE
BATTERY.
RED WIRE GOES TO POSITIVE
(+) SIDE OF BATTERY.
BLACK WIRE GOES TO
NEGATIVE(-) SIDE OF BATTERY.



STEP 6

AFTER CONNECTING DRL
HARNESS TO BATTERY, ROUTE
AND SECURE DRL HARNESS
FROM BATTERY TO VEHICLE
WITH PROVIDED ZIP TIES.



STEP 7

TEST ALL FUNCTIONS OF HEADLIGHTS BEFORE DRIVING ON THE ROAD.