

PRODUCT DESCRIPTION: Tail light
APPLICATION: 2017 -2018 Ford F-250/
F-350 Super Duty



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 8mm Socket

STEP 1



Factory tail light

STEP 2



Lower tail gate and remove two 8mm bolts.

STEP 3



To remove tail light pull light towards side of vehicle to release locating guide pins.

STEP 4



Disconnect factory connectors from factory tail light.

STEP 5




If locating guide pins are still attached to factory tail light remove pin and transfer to Anzo USA tail light.

STEP 6



Clean surface area inside fender well with mild soap or rubbing alcohol. Peel 3m backing tape on resistors and attach to fender well.

STEP 7

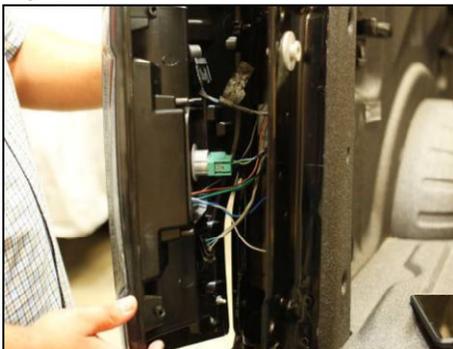


Connect factory connections to Anzo USA tail light. Slide tail light into fender well making sure guide pins go into opening.

STEP 8



Install two 8mm tail light bolts. Repeat steps 2-8 on opposite side to finish installation.

STEP 9

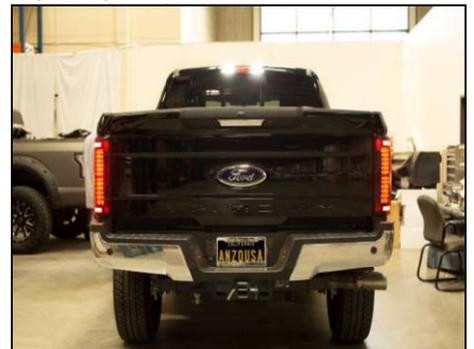

Test all functions of lights before operating vehicle.