

**PRODUCT DESCRIPTION:** 3<sup>rd</sup> Brake Light  
**APPLICATION:** 2009-2018 Dodge Ram



## INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION  
Improper installation may void warranty.



**TOOLS NEEDED:** Phillip's head screwdriver

### STEP 1



Instructions on how to replace the factory 3<sup>rd</sup> brake light with the Anzo USA brake light.

### STEP 2



Use Phillip's head screwdriver to remove 2 screws holding factory 3<sup>rd</sup> brake light in place.

### STEP 3



Remove factory 3<sup>rd</sup> brake light from vehicle.

### STEP 4



Disconnect main harness connector from factory 3<sup>rd</sup> brake light.

### STEP 5




Connect main harness connector from vehicle side to Anzo USA 3<sup>rd</sup> brake light connector.

### STEP 6



Insert resistor and main harness connector into opening.

### STEP 7

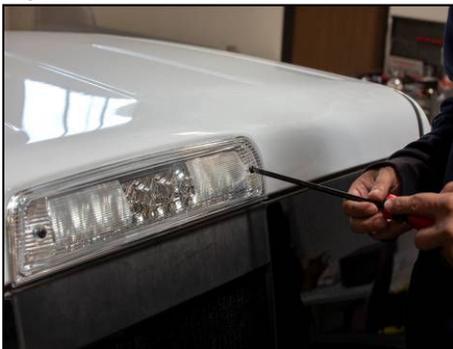

Insert Anzo USA 3<sup>rd</sup> brake light onto vehicle and screw factory screws into vehicle.

**NOTE:** To prevent damage to lens hand-tighten Screws so they are not over-tightened.

### STEP 9



Test cargo and brake light functions on light before operating vehicle.