


STEP 1

REMOVE FACTORY TAIL LIGHT TRIM PIECE ON DRIVER SIDE PER INSTRUCTIONS IN STEP 2 AND STEP 3.



STEP 2

USE SCREW DRIVER TO LOOSEN SCREWS CIRCLED IN RED TO REMOVE FACTORY TAIL LIGHT TRIM PIECE WITH TAILGATE BUTTON.

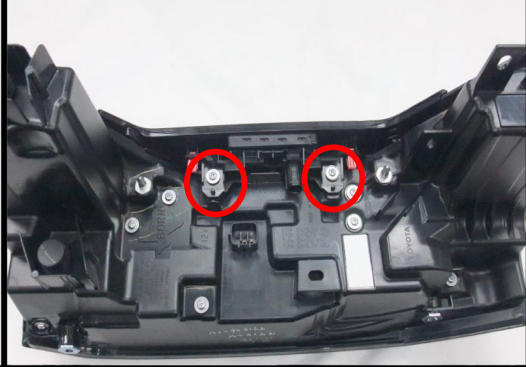

STEP 3


REMOVE THE SIDE TRIM PIECE FROM FACTORY TAIL LIGHT. SET TRIM PIECE ASIDE FOR LATER USE.



STEP 4

REPEAT STEP 2 ON NEW TAIL LIGHT TO REMOVE TRIM PIECE ON NEW TAIL LIGHT.

INSTALL FACTORY TRIM PIECE WITH TAILGATE BUTTON REMOVED IN STEP 3 ONTO NEW TAIL LIGHT. TIGHTEN SCREWS TO NEW HOUSING.

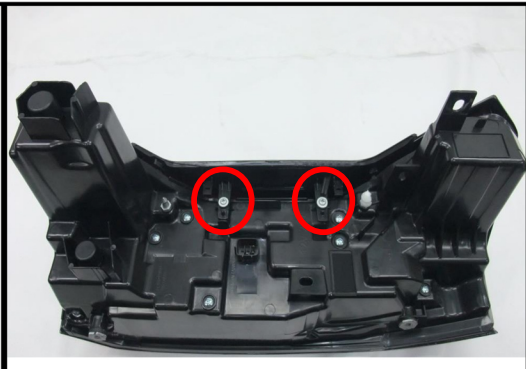

STEP 5

CONNECT ALL CONNECTORS AND TEST ALL FUNCTIONS BEFORE DRIVING ON THE ROAD.

